


Instruction manual

Two-Speed PORTA-BAND® Band Saw

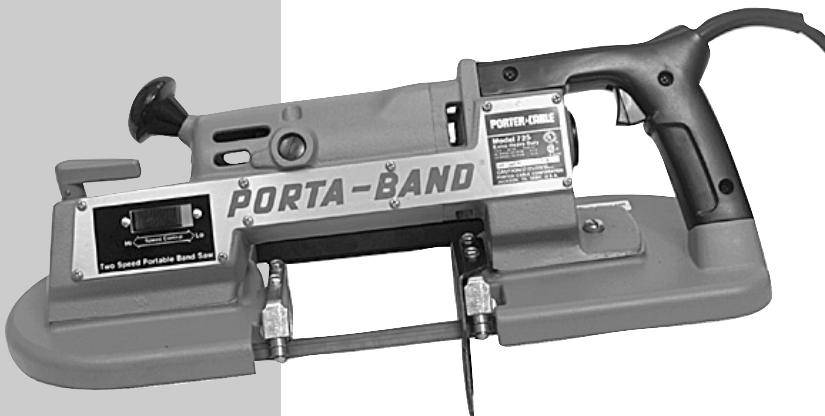

MODEL 725

To learn more about Porter-Cable
visit our website at:

<http://www.porter-cable.com>

PORTE
CABLE
PROFESSIONAL POWER TOOLS

IMPORTANT

*Please make certain that the person who
is to use this equipment carefully reads and
understands these instructions before
starting operations.*

The Model and Serial No. plate is located on the main housing of the tool. Record these numbers in the spaces below and retain for future reference.

Model No. _____

Type _____

Serial No. _____

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
SAFETY GUIDELINES	3
GENERAL SAFETY RULES	4
ADDITIONAL SPECIFIC SAFETY RULES	6
FUNCTIONAL DESCRIPTION	8
CARTON CONTENTS	8
ASSEMBLY	8
OPERATION	9
TROUBLESHOOTING	11
MAINTENANCE	12
SERVICE	13
ACCESSORIES	14
WARRANTY	14
ESPAÑOL	15
FRANÇAISE	29
SERVICE CENTER LOCATIONS	back cover

IMPORTANT SAFETY INSTRUCTIONS

⚠WARNING Read and understand all warnings and operating instructions before using any tool or equipment. When using tools or equipment, basic safety precautions should always be followed to reduce the risk of personal injury. Improper operation, maintenance or modification of tools or equipment could result in serious injury and property damage. There are certain applications for which tools and equipment are designed. Porter-Cable strongly recommends that this product NOT be modified and/or used for any application other than for which it was designed.

If you have any questions relative to its application DO NOT use the product until you have written Porter-Cable and we have advised you.

Online contact form at www.porter-cable.com

Postal Mail: Technical Service Manager

Porter-Cable Corporation
4825 Highway 45 North
Jackson, TN 38305

Information regarding the safe and proper operation of this tool is available from the following sources:

Power Tool Institute

1300 Sumner Avenue, Cleveland, OH 44115-2851

www.powertoolinstitute.org

National Safety Council

1121 Spring Lake Drive, Itasca, IL 60143-3201

American National Standards Institute, 25 West 43rd Street, 4 floor, New York, NY 10036 www.ansi.org ANSI O1.1Safety Requirements for Woodworking Machines, and the U.S. Department of Labor regulations www.osha.gov

SAVE THESE INSTRUCTIONS!

SAFETY GUIDELINES - DEFINITIONS

It is important for you to read and understand this manual. The information it contains relates to protecting YOUR SAFETY and PREVENTING PROBLEMS. The symbols below are used to help you recognize this information.



▲ DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

▲ WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

▲ CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION used without the safety alert symbol indicates potentially hazardous situation which, if not avoided, may result in property damage.

CALIFORNIA PROPOSITION 65

▲ WARNING Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known (to the State of California) to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints
- crystalline silica from bricks and cement and other masonry products
- arsenic and chromium from chemically-treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, always wear NIOSH/OSHA approved, properly fitting face mask or respirator when using such tools.

GENERAL SAFETY RULES

⚠WARNING Read all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. The term "power tool" in all of the warnings listed below refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.



SAVE THESE INSTRUCTIONS

1) Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet.** Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord.** Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool.** Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use safety equipment. Always wear eye protection.** Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Avoid accidental starting. Ensure the switch is in the off-position before plugging in.** Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.

GENERAL SAFETY RULES continued

- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach.** Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- f) **Dress properly.** Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of these devices can reduce dust-related hazards.

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools.** Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. **If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

ADDITIONAL SPECIFIC SAFETY RULES

1. **Hold tool by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord.** Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.
2. **Keep blades sharp.** Sharp blades will do the job better and safer.
3. **Keep hands away from cutting area.** When sawing never reach underneath or behind the material being cut for any reason.
4. **When you have finished a cut** be careful not to come into contact with the blade. Turn off the motor immediately.
5. **Make sure the material to be cut is firmly held to prevent movement.**
6. **Stay clear of end pieces that may fall after being cut off.**
7. **Never use a liquid coolant with portable band saws.**
8. **⚠️WARNING** Liquid coolants can increase the risk of electric shock. Use only stick wax to lubricate the blade.
9. **⚠️WARNING** EXERCISE EXTREME CAUTION WHEN BLIND CUTTING TO BE CERTAIN THAT THERE ARE NO FOREIGN OBJECTS SUCH AS ELECTRICAL WIRE, CONDUIT, PLUMBING PIPES, ETC., THAT MAY COME INTO CONTACT WITH THE BLADE.
10. **Never hold work** in your hand, lap, or against other parts of your body when sawing.
11. **Some wood contains preservatives which can be toxic.** Take extra care to prevent inhalation and skin contact when working with these materials. Request, and follow, all safety information available from your material supplier.
12. **Wear eye and hearing protection. Always use safety glasses.** Everyday eyeglasses are NOT safety glasses. USE CERTIFIED SAFETY EQUIPMENT. Eye protection equipment should comply with ANSI Z87.1 standards. Hearing equipment should comply with ANSI S3.19 standards.
13. **⚠️WARNING** Use of this tool can generate and disburse dust or other airborne particles, including wood dust, crystalline silica dust and asbestos dust. Direct particles away from face and body. Always operate tool in well ventilated area and provide for proper dust removal. Use dust collection system wherever possible. Exposure to the dust may cause serious and permanent respiratory or other injury, including silicosis (a serious lung disease), cancer, and death. Avoid breathing the dust, and avoid prolonged contact with dust. Allowing dust to get into your mouth or eyes, or lay on your skin may promote absorption of harmful material. Always use properly fitting NIOSH/OSHA approved respiratory protection appropriate for the dust exposure, and wash exposed areas with soap and water.

SYMBOL	DEFINITION
V	volts
A	amperes
Hz	hertz
W	watts
kW	kilowatts
F	farads
μF	microfarads
l	litres
g	grams
kg	kilograms
bar	bars
Pa	pascals
h	hours
min	minutes
s	seconds
n_0	no-load speed
.../min or ...min ⁻¹	Revolutions or reciprocations per minute
— — — or d.c.	direct current
	or a.c. alternating current
2 	two-phase alternating current
2N 	two-phase alternating current with neutral
3 	three-phase alternating current
3N 	three-phase alternating current with neutral
	rated current of the appropriate fuse-link in amperes
	time-lag miniature fuse-link where X is the symbol for the time/current characteristic, as given in IEC 60127
	protective earth
	class II tool
IPXX	IP symbol

MOTOR

Many Porter-Cable tools will operate on either D.C., or single phase 25 to 60 cycle A.C. current and voltage within plus or minus 5 percent of that shown on the specification plate on the tool. Several models, however, are designed for A.C. current only. Refer to the specification plate on your tool for proper voltage and current rating.

CAUTION Do not operate your tool on a current on which the voltage is not within correct limits. Do not operate tools rated A.C. only on D.C. current. To do so may seriously damage the tool.

EXTENSION CORD SELECTION

If an extension cord is used, make sure the conductor size is large enough to prevent excessive voltage drop which will cause loss of power and possible motor damage. A table of recommended extension cord sizes will be found in this section. This table is based on limiting line voltage drop to 5 volts (10 volts for 230 volts) at 150% of rated amperes.

If an extension cord is to be used outdoors, it must be marked with the suffix W-A or W following the cord type designation. For example - SJTW-A to indicate it is acceptable for outdoor use.

RECOMMENDED EXTENSION CORD SIZES FOR USE WITH PORTABLE ELECTRIC TOOLS

Nameplate Ampere Rating	Length of Cord in Feet									
	115V	25 Ft.	50 Ft.	100 Ft.	150 Ft.	200 Ft.	250 Ft.	300 Ft.	400 Ft.	500 Ft.
	230V	50 Ft.	100 Ft.	200 Ft.	300 Ft.	400 Ft.	500 Ft.	600 Ft.	800 Ft.	1000 Ft.
0-2	18	18	18	16	16	14	14	12	12	12
2-3	18	18	16	14	14	12	12	10	10	10
3-4	18	18	16	14	12	12	12	10	10	8
4-5	18	18	14	12	12	10	10	10	8	8
5-6	18	16	14	12	10	10	10	8	8	6
6-8	18	16	12	10	10	8	8	6	6	6
8-10	18	14	12	10	8	8	8	6	6	4
10-12	16	14	10	8	8	6	6	6	4	4
12-14	16	12	10	8	6	6	6	4	4	2
14-16	16	12	10	8	6	6	4	4	2	2
16-18	14	12	8	8	6	4	4	2	2	2
18-20	14	12	8	6	6	4	4	2	2	2

FUNCTIONAL DESCRIPTION

FOREWORD

MODEL 725 PORTER-CABLE Portable Band Saw is designed to cut various types of material up to 3³/₈" diameter or 3³/₈" x 4¹/₈" rectangular shape.

CARTON CONTENTS

1. Porta-Band saw
2. Tube of lubricant

ASSEMBLY

NOTE: This tool is shipped completely assembled. No assembly time or tools are required.

OPERATION

TO START AND STOP SAW

1. Make sure power circuit voltage is the same as that shown on the specification plate on the saw. Connect machine to power circuit.
2. Squeeze trigger switch (A), Fig. 1, to start motor. Release trigger to stop motor.

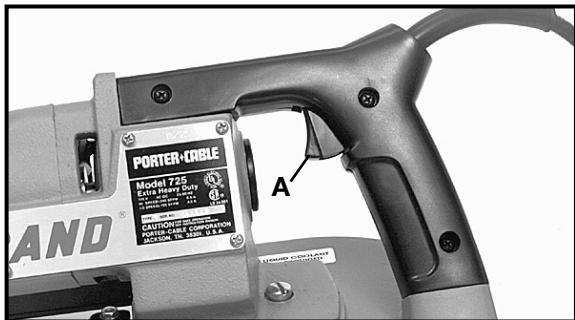


Fig. 1

TWO SPEED SWITCH

The Two-Speed Band Saw is equipped with a speed changing switch (B) Fig. 2. For LOW-SPEED cutting, slide the switch bar toward "LO". For HIGH-SPEED cutting, slide the switch bar toward "HI".

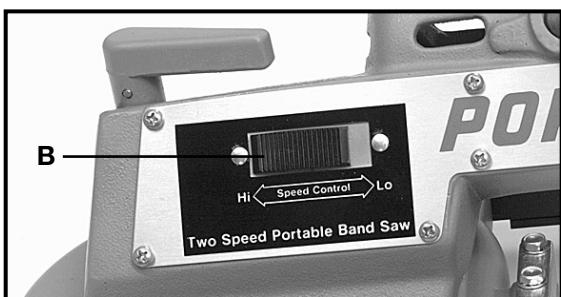


Fig. 2

BAND SAW BLADES

MODEL 725 requires 44 $\frac{7}{8}$ " long blades that are .020" thick and 1/2" wide.

WARNING Blades for stationary band saws are of different thickness than above and WILL NOT fit the precision blade guides on portable band saws. Therefore, they MUST NOT be used.

Refer to the blade selection chart in the Porter-Cable catalog (see "ACCESSORIES" section in this manual) for types of blades available and their recommended usages. This chart is provided as a guide only. Due to the many materials that can be cut, operator's experience will determine which blade will have the longest life for any specific operation.

WHICH BLADE TO USE

In general, select a blade which will allow at least two teeth to be engaged in the material thickness. The thinner or the harder the material, the finer the blade teeth. The thicker or the softer the material, the coarser the blade teeth. The hi-speed steel blades stay sharp longer than carbon steel blades.

USE OF LUBRICANTS

CAUTION NEVER USE LIQUID COOLANT WITH YOUR BAND SAW. Damage to the blade guide bearings or rubber tires on the pulleys may result. Porter-Cable's "Lube Wax" is available as an accessory and is recommended when cutting aluminum, brass and thick materials. Cast iron should be cut dry. With the saw running, apply to wax momentarily to both sides of the blade. Reapply wax intermittently as needed.

WARNING EXERCISE EXTREME CARE TO PREVENT HANDS FROM CONTACTING THE BLADE.

After prolonged cutting, the wax will cling to the pulleys of your BAND SAW. This does not affect the operation of the machine. All that is necessary is to disconnect the machine from the power source and wipe the wax from the pulleys.

TO CHANGE SAW BLADES

CAUTION DISCONNECT TOOL FROM POWER SOURCE.

To remove the blade, turn handle (A), Fig. 3, clockwise to release tension on the saw blade. Remove the blade, first from the pulleys and then from the blade guide.

Before installing a blade, clean chips and wax, which may have accumulated on blade guides and pulley tires. To install the blade, insert blade in blade guides and then position on pulleys. **NOTE: MAKE SURE TEETH ON LEFT SIDE OF MACHINE POINT TOWARD THE REAR OF THE MACHINE.** See Fig. 4 and 5. Turn handle (A), Fig. 3, counterclockwise as far as it will go. This places tension on saw blade.

Start and stop saw two or three times to seat blade on pulleys.

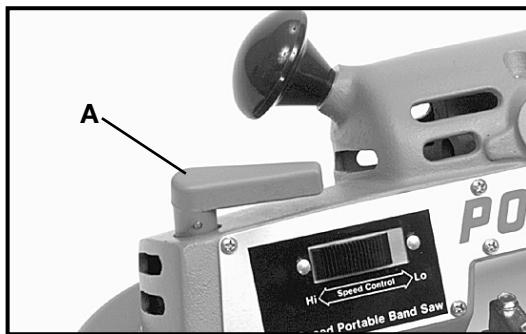


Fig. 3

→
DIRECTION OF BLADE TRAVEL
ON LEFT SIDE OF MACHINE

[Wavy line icon]
POSITION OF TEETH ON
LEFT SIDE OF MACHINE

Fig. 4

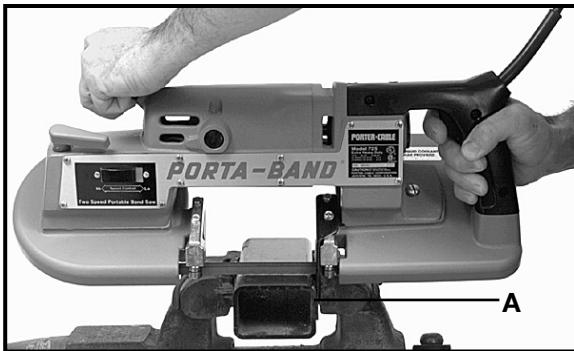


Fig. 5

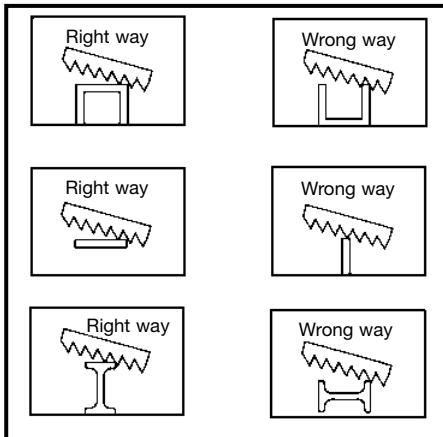


Fig. 6

HOW TO USE A PORTABLE BAND SAW

1. Verify material to be cut is firmly held to prevent movement.
2. Set Two-Speed switch to desired position. Speed CAN be changed while machine is running.
3. Hold the saw as shown in Fig. 5, with the work stop (A) contacting the work and blade teeth clear of the work.
4. Turn saw "ON" and lower onto work. Allow weight of saw to control cutting pressure. Additional pressure will slow down speed of the blade and reduce cutting efficiency.
5. Hold saw straight in the cut. Any twisting or cocking of the blade results in shorter blade life.
6. **CAUTION** Stay clear of end pieces that may fall after being cut off.
7. At completion of cut DO NOT allow saw to fall against work. HOLD SAW SECURELY.
8. Fig. 6 shows the proper cutting position for various shapes.

TROUBLESHOOTING

For assistance with your tool, visit our website at www.porter-cable.com for a list of service centers or call the Porter-Cable help line at 1-800-487-8665.

MAINTENANCE

KEEP TOOL CLEAN

Periodically blow out all air passages with dry compressed air. All plastic parts should be cleaned with a soft damp cloth. NEVER use solvents to clean plastic parts. They could possibly dissolve or otherwise damage the material.

WARNING Wear ANSI Z87.1 safety glasses while using compressed air.

FAILURE TO START

Should your tool fail to start, check to make sure the prongs on the cord plug are making good contact in the outlet. Also, check for blown fuses or open circuit breakers in the line.

LUBRICATION

Although all PORTER-CABLE tools have been thoroughly lubricated with a sufficient amount of high grade lubricant at the time of manufacture, it is recommended that the oil level in the gear chamber be checked before using your saw and periodically thereafter as follows:

1. **WARNING:** Remove band saw blade to prevent accidental contact.
2. Remove oil filler plug and gasket (A) Fig. 7.
3. Stand saw on front pulley housing and start motor.
4. With motor running, observe whether the lubricant is being carried over the top of the worm gear teeth (B) Fig. 7. If not, stop the motor and add a small amount of lubricant furnished with your saw.
5. Repeat step 4 until the lubricant is carried over the top of the worm gear teeth while the motor is running. DO NOT OVERFILL GEAR CHAMBER. If you do, the pressure created by the pumping action of the gears will force lubricant thru the seals into the motor chamber and may cause damage to the motor as well as gear failure.
6. Install oil plug and gasket.

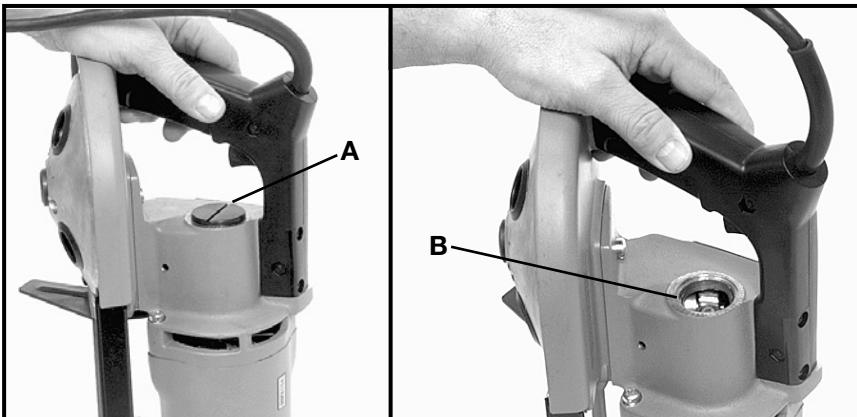


Fig. 7

BRUSH INSPECTION (If applicable)

For your continued safety and electrical protection, brush inspection and replacement on this tool should ONLY be performed by an AUTHORIZED PORTER-CABLE SERVICE STATION or a PORTER-CABLE•DELTA FACTORY SERVICE CENTER.

At approximately 100 hours of use, take or send your tool to your nearest authorized Porter-Cable Service Station to be thoroughly cleaned and inspected. Have worn parts replaced and lubricated with fresh lubricant. Have new brushes installed, and test the tool for performance.

Any loss of power before the above maintenance check may indicate the need for immediate servicing of your tool. DO NOT CONTINUE TO OPERATE TOOL UNDER THIS CONDITION. If proper operating voltage is present, return your tool to the service station for immediate service.

SERVICE

REPLACEMENT PARTS

When servicing use only identical replacement parts. For a service parts list or to learn more about Porter-Cable visit our website at www.porter-cable.com

SERVICE AND REPAIRS

All quality tools will eventually require servicing, or replacement of parts due to wear from normal use. For assistance with your tool, visit our website at www.porter-cable.com for a list of service centers or call the Customer Care Department at **1-800-487-8665**. All repairs made by our service centers are fully guaranteed against defective material and workmanship. We cannot guarantee repairs made or attempted by others.

Should you have any questions about your tool, feel free to write us at any time. In any communications, please give all information shown on the nameplate of your tool (model number, type, serial number, etc.).

PORTER-CABLE • DELTA SERVICE CENTERS (CENTROS DE SERVICIO DE PORTER-CABLE • DELTA) (CENTRE DE SERVICE PORTER-CABLE • DELTA)

**Parts and Repair Service for Porter-Cable • Delta Power Tools are Available at These Locations
(Obtenga Refaccion de Partes o Servicio para su Herramienta en los Siguientes Centros de Porter-Cable • Delta)
(Locations où vous trouverez les pièces de rechange nécessaires ainsi qu'un service d'entretien)**

ARIZONA

Phoenix 85013-2906
4501 N. 7th Ave.
Phone: (602) 279-6414
Fax: (602) 279-5470

GEORGIA

Tampa 33634
4909 West Waters Ave.
Phone: (813) 884-0434
Fax: (813) 888-5997

Forest Park 30297 (Atlanta)
5442 Frontage Road,
Suite 112
Phone: (404) 608-0006
Fax: (404) 608-1123

MICHIGAN

Madison Heights 48071 (Detroit)
30475 Stephenson Highway
Phone: (248) 597-5000
Fax: (248) 597-5004

PENNSYLVANIA

Parma Heights OH 44130
6485 Pearl Road
Phone: (440) 842-9100
Fax: (440) 884-3430

Portland 97230
14811 North East Airport Way
Phone: (503) 255-6556
Fax: (503) 255-6543

CALIFORNIA

Ontario 91761 (Los Angeles)
3949A East Guasti Road
Phone: (909) 390-5555
Fax: (909) 390-5554

ILLINOIS

Addison 60101 (Chicago)
400 South Rohrung Rd.
Phone: (630) 424-8805
Fax: (630) 424-8895

KANSAS

Overland Park 66214
9201 Quivira Road
Phone: (913) 495-4330
Fax: (913) 495-4378

MARYLAND

Elkridge 21075 (Baltimore)
7397-102 Washington Blvd.
Phone: (410) 799-9394
Fax: (410) 799-9398

MASSACHUSETTS

Franklin 02038 (Boston)
Franklin Industrial Park
101E Constitution Blvd.
Phone: (508) 528-8802
Fax: (508) 528-8089

MINNESOTA

Eden Prairie 55344
9709 Valley View Road
Phone: (952) 884-9191
Fax: (952) 884-3750

OREGON

Portland 97230
14811 North East Airport Way

Phone: (503) 255-6556

Fax: (503) 255-6543

San Diego 92111
7290 Clairemont Mesa Blvd.
Phone: (858) 279-2011
Fax: (858) 279-0362

San Leandro 94577 (Oakland)
3039 Teagarden Street
Phone: (510) 357-9762
Fax: (510) 357-7939

COLORADO

Denver 80223
700 West Mississippi Ave.
Phone: (303) 922-8325
Fax: (303) 922-0245

FLORIDA

Davie 33314 (Miami)
4343 South State Rd. 7 (441)
Unit #107
Phone: (954) 321-6635
Fax: (954) 321-6638

MISSOURI

St. Louis 63146
11477 Page Service Drive
Phone: (314) 997-9100
Fax: (314) 997-9183

PENNSYLVANIA

Willow Grove 19090 (Philadelphia)
520 North York Read
Phone: (215) 656-1430

Fax: (215) 656-1433

TEXAS

Carrollton 75006 (Dallas)
1300 Interstate 35 N, Suite 112
Phone: (972) 446-2996
Fax: (972) 446-8157

Houston 77022-2122

536 East Ridwell Rd.
Phone: (713) 692-7111

Fax: (713) 692-1107

WASHINGTON

Auburn 98001(Seattle)
3320 West Valley HWY, North
Building D, Suite 111
Phone: (253) 333-8333
Fax: (253) 333-9613

Authorized Service Stations are located in many large cities. Telephone **800-487-8665** or **731-541-6042** for assistance locating one. Parts and accessories for Porter-Cable • Delta products should be obtained by contacting any Porter-Cable • Delta Distributor, Authorized Service Center, or Porter-Cable • Delta Factory Service Center. If you do not have access to any of these, call **888-848-5175** and you will be directed to the nearest Porter-Cable • Delta Factory Service Center. Las Estaciones de Servicio Autorizadas están ubicadas en muchas grandes ciudades. Llame al **800-487-8665** ó al **731-541-6042** para obtener asistencia a fin de localizar una. Las piezas y los accesorios para los productos Porter-Cable • Delta deben obtenerse poniéndose en contacto con cualquier distribuidor Porter-Cable • Delta, Centro de Servicio Autorizado o Centro de Servicio de Fábrica Porter-Cable • Delta. Si no tiene acceso a ninguna de estas opciones, llame al **888-848-5175** y le dirigirán al Centro de Servicio de Fábrica Porter-Cable • Delta más cercano. Des centres de service agréés sont situés dans beaucoup de grandes villes. Appelez au **800-487-8665** ou au **731-541-6042** pour obtenir de l'aide pour en repérer un. Pour obtenir des pièces et accessoires pour les produits Porter-Cable • Delta, s'adresser à tout distributeur Porter-Cable • Delta, centre de service agréé ou centre de service d'usine Porter-Cable • Delta. Si vous n'avez accès à aucun de ces centres, appeler le **888-848-5175** et on vous dirigera vers le centre de service d'usine Porter-Cable • Delta le plus proche.

CANADIAN PORTER-CABLE • DELTA SERVICE CENTERS

ALBERTA

Bay 6, 2520-23rd St. N.E.
Calgary, Alberta
T2E 8L2

Phone: (403) 735-6166

Fax: (403) 735-6144

BRITISH COLUMBIA

8520 Baxter Place
Burnaby, B.C.
V5A 4T8

Phone: (604) 420-0102

Fax: (604) 420-3522

MANITOBA

1699 Dublin Avenue
Winnipeg, Manitoba
R3H 0H2

Phone: (204) 633-9259

Fax: (204) 632-1976

ONTARIO

505 Southgate Drive
Guelph, Ontario
N1H 6M7

Phone: (519) 767-4132

Fax: (519) 767-4131

QUÉBEC

1515 Ave.
St-Jean Baptiste, Suite 160
Québec, P.Q.

G2E 5E2

Phone: (418) 877-7112

Fax: (418) 877-7123

1447, Begin

St-Laurent, (Mtl), P.Q.

H4R 1V8

Phone: (514) 336-8772

Fax: (514) 336-3505

The following are trademarks of PORTER-CABLE • DELTA (Las siguientes son marcas registradas de PORTER-CABLE • DELTA S.A.) (Les marques suivantes sont des marques de fabricant de la PORTER-CABLE • DELTA): Auto-Set®, BAMMER®, B.O.S.S., Builder's Saw®, Contractor's Saw®, Grip Vac™, Homecraft™, INNOVATION THAT WORKS™, Jet-Lock®, JETSTREAM®, LASERLOC®, MICRO-SET®, Micro-Sel®, MIDI LATHE®, MORTENTM®, NETWORK™, OMNIUG®, POCKET CUTTER®, PORTA-BAND®, PORTA-PLANE®, PORTER-CABLE® &(design), PORTER-CABLE® PROFESSIONAL POWER TOOLS, PORTER-CABLE® REDEFINING PERFORMANCE™, Posi-Matic®, Q-3™ &(design), QUICKSAND™ &(design), QUICKSET™ II, QUICKSET PLUS™, RIPTIPE™ &(design), SAFE GUARD™ II, SAFETY LOC®, Sanding Center®, SANDTRAP™ &(design), SAW BOSS®, Sawbuck™, Sidekick®, SPEED-BLOC®, SPEEDOMATIC®, SPEEDTRONIC®, STAIR EASE®, The American Woodshop™ &(design), The Lumber Company™ &(design), THE PROFESSIONAL EDGE®, THE PROFESSIONAL SELECT®, THIN-LINE™, TIGER®, TIGER CUB®, TIGER SAW®, TORQBUSTER®, TORQ-BUSTER®, TRU-MATCH™, TWIN-LITE®, UNIGUARD®, Unifence®, UNIFEEDER™, Unihead®, Uniplane™, Unirip®, Unisaw®, Unisolve®, Versa-Feeder®, VERSA-PLANE®, WHISPER SERIES™, WOODWORKER'S CHOICE™.

Trademarks noted with ® are registered in the United States Patent and Trademark Office and may also be registered in other countries. Las Marcas Registradas con el signo de ™ y ® son registradas por la Oficina de Registros y Patentes de los Estados Unidos y también pueden estar registradas en otros países. Marques déposées, indiquées par la lettre ™ et ®, sont déposées au Bureau des brevets d'invention et marques déposées aux Etats-Unis et pourraient être déposées aux autres pays.